


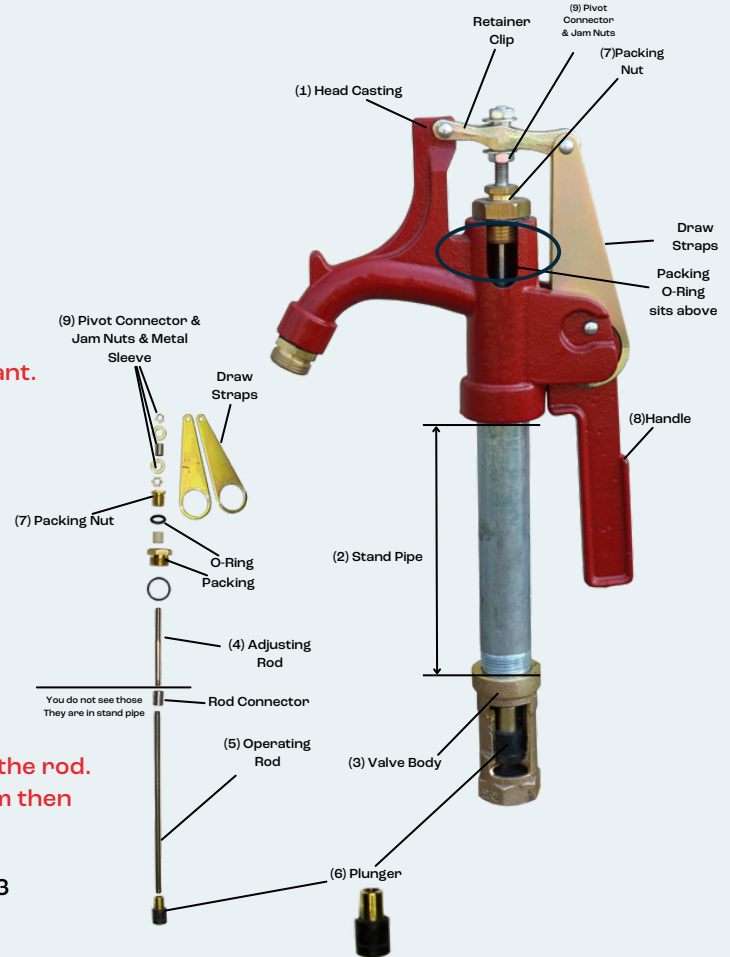

# R6000 Leaking Out of Packing

- 1 Turn off the water supply.
- 2 Remove the retainer clip.
- 3 Remove the top jam nut and washer.
- 4 Lift the rocker arm up and away from the hydrant.
- 5 Mark placement of lower jam nut.
- 6 Remove the metal sleeve and lower the jam nut.
- 7 Tighten the packing nut.
- 8 Place the lower jam nut and washer to mark on the rod. Install pivot connector, metal sleeve, rocker arm then upper washer and jam nut.
- 9 Sometimes this may have to be repeated, after 3 adjustments, new packing needs to be added.



## Tools Needed

Wrenches

2x 9/16

1x 3/4"

