



# PITLESS ADAPTER INSTALLATION GUIDE

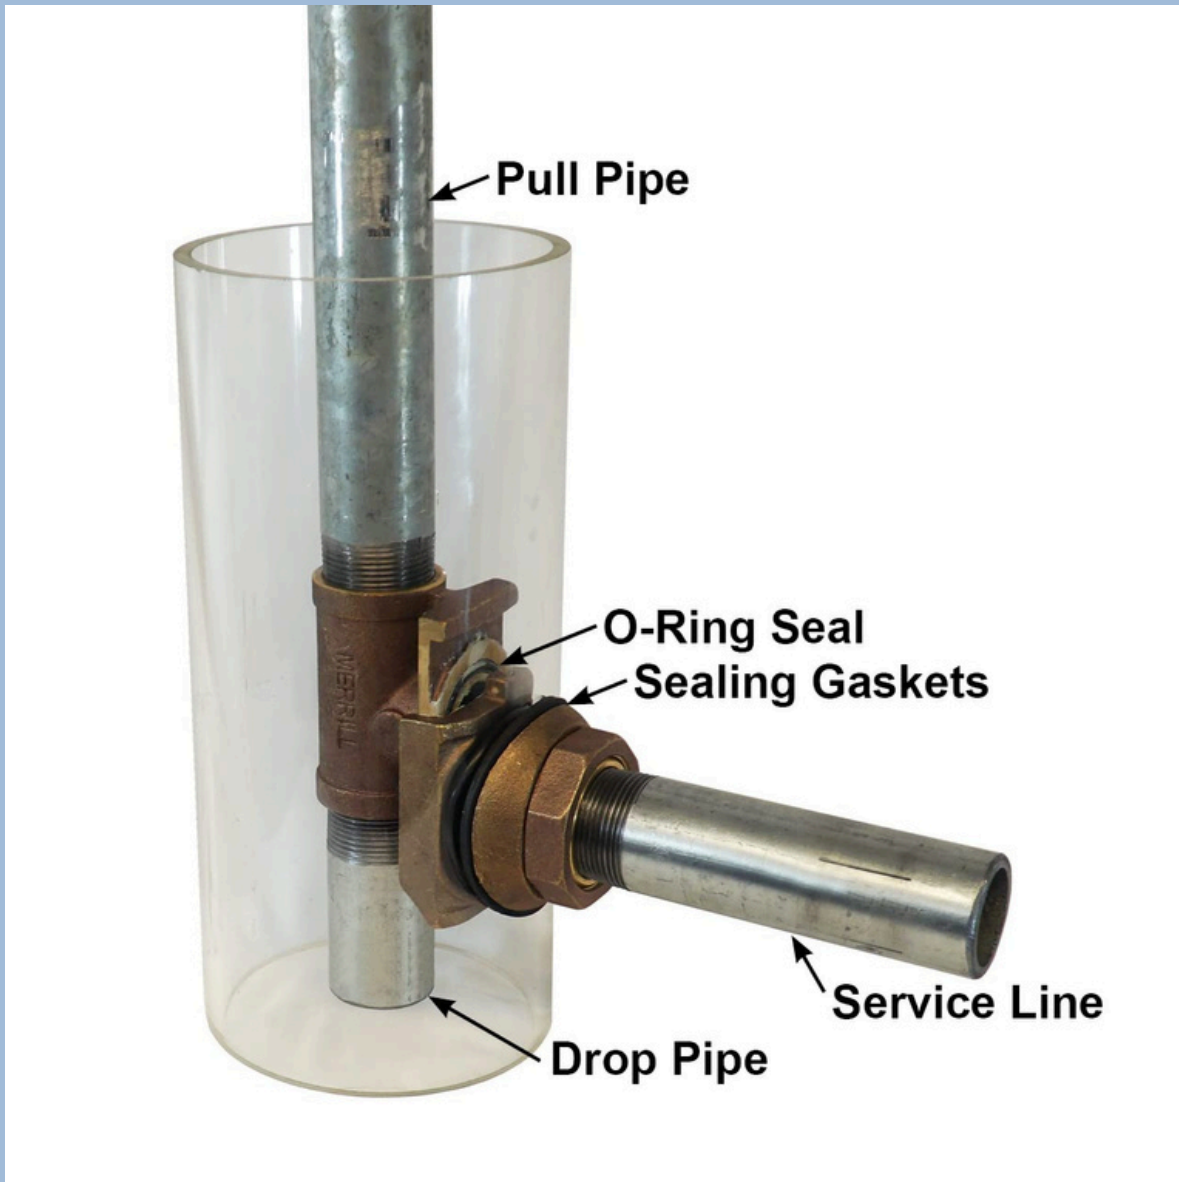

## YOUR PITLESS ADAPTER INSTALLATION CHECKLIST:

- HOLE SAW
- LONG PIPE
- WRENCH
- ANTI-SEIZE/GASKET LUBE

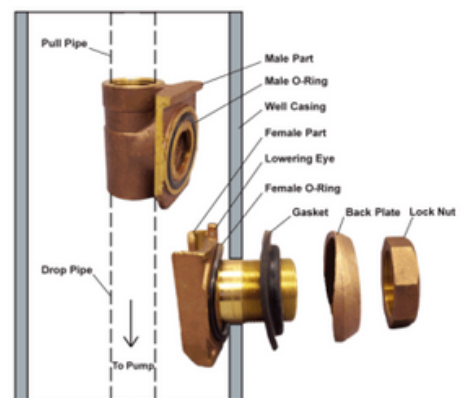

**01** FIND A SPOT ON THE SIDE OF THE WELL CASING THAT'S BELOW THE FROST LINE; THIS IS WHERE THE WATER LINE WILL CONNECT AND RUN FROM THE WELL

**02** CENTER PUNCH TO MARK THE SELECTED DEPTH THE ADAPTER WILL GO ON THE WELL CASING



**03** USE A HOLE SAW TO DRILL THROUGH THE CASING TO FORM THE HOLE FOR THE ADAPTER




REFERENCE THE CHART BELOW TO FIND THE CORRECT HOLE SAW SIZE FOR YOUR ADAPTER MODEL!

1-3/4" Hole Saw	MB50, MBNL50, SSMB50, MB200, MBNL200, SSMB200, MBI100, MB60, MBNL60, MBNL100, MBNL100N, MBPNL100
2-1/8" Hole Saw	MB225, MBNL225, SSMB225, MBI125N, MBPNL125, MBNL125
2-1/2" Hole Saw	MBNL250
3" Hole Saw	MBNL300

04

REMOVE THE LOCK NUT, BACKPLATE, AND GASKET FROM THE ADAPTER. **DO NOT** REMOVE THE FEMALE O-RING

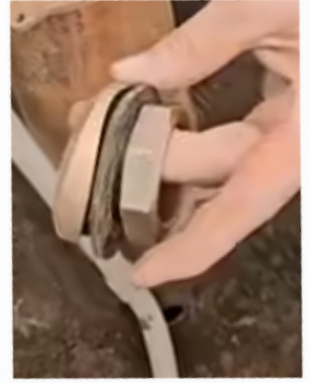

SCREW A PIPE INTO THE MALE HALF OF THE ADAPTER

05



06

LOWER THE FEMALE PART DOWN USING THE PIPE, UNTIL IT POKES THROUGH THE HOLE



FROM THE OUTSIDE SECURE THE ADAPTER IN PLACE BY SCREWING THE GASKET, BACKPLATE, AND LOCK NUT BACK IN PLACE

07



USE A WRENCH TO TIGHTEN THE LOCK NUT. IF NEEDED, USE THE MALE PART AND PULL PIPE TO HELP WITH VERTICAL ALIGNMENT.

08

TAKE THE MALE PART AND PIPE  
OUT FROM INSIDE THE WELL



APPLY ANTI-SEIZE OR GASKET  
LUBE TO THE MACHINED  
SURFACE AND O-RING

09

10

CONNECT THE MALE PART TO  
THE PUMP DROP PIPE



ENJOY YOUR NEWLY INSTALLED  
PITLESS ADAPTER!

11