



R6000 Plunger Replacement

1

Turn off the water supply.

2

Remove the retainer clip.

3

Remove the top jam nut and washer.

4

Lift the rocker arm up and away from the hydrant.

5

Mark placement of lower jam nut.

6

Remove the metal sleeve and lower the jam nut.

7

Unscrew the packing nut.

8

Pull out the inside rod, packing gland, and plunger, which should be attached to the head. Make sure to pull straight up as to not bend the rod.

9


Unscrew the old plunger and replace it with a new plunger. Make sure to not grip the rubber portion of the plunger as you will cause damage. Place back in pipe.

10

Place lower jam nut and washer to mark on rod. Install packing gland, metal sleeve, rocker arm then upper washer and jam nut.

11

No further adjustments should be necessary.

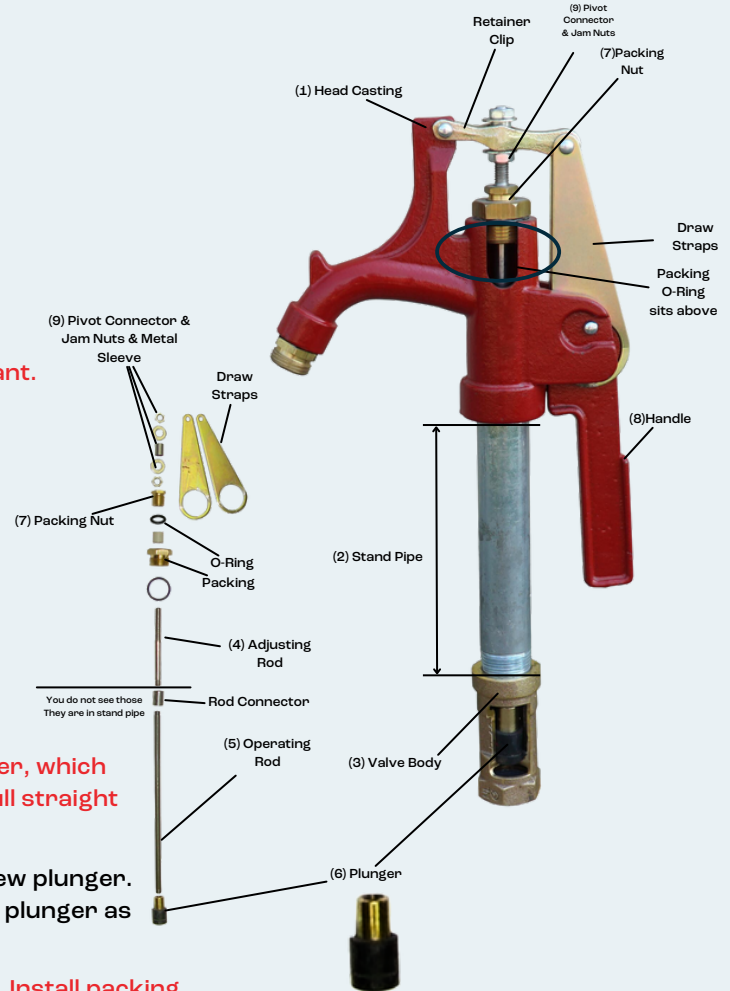

Ritchie Hydrant Head Replacement

You may replace your Ritchie Hydrant Head with a Merrill R-6000 using a R-121R parts kit.



Tools Needed

Wrenches

2x 9/16

1x 3/4



[Click HERE](#) to find YouTube Videos

Questions? 712-454-7966