



R6000 Packing Replacement

1 Turn off the water supply.

2 Remove the retainer clip.

3 Remove the top jam nut and washer.

4 Lift the rocker arm up and away from the hydrant.

5 Mark placement of lower jam nut.

6 Remove the metal sleeve and lower the jam nut.

7 Unscrew and remove the packing nut.

8 DO NOT REMOVE OLD PACKING. Doing so can damage the threads.


9 Take your new packing and cut a 1/3 off.

10 Take the small piece of packing and place it in the packing nut hole. On top of the old packing.

11 Replace the packing nut and tighten it down.

12 Place the lower jam nut and washer to mark on the rod. Install packing gland, metal sleeve, rocker arm then upper washer and jam nut.

13 No further adjustments should be necessary.

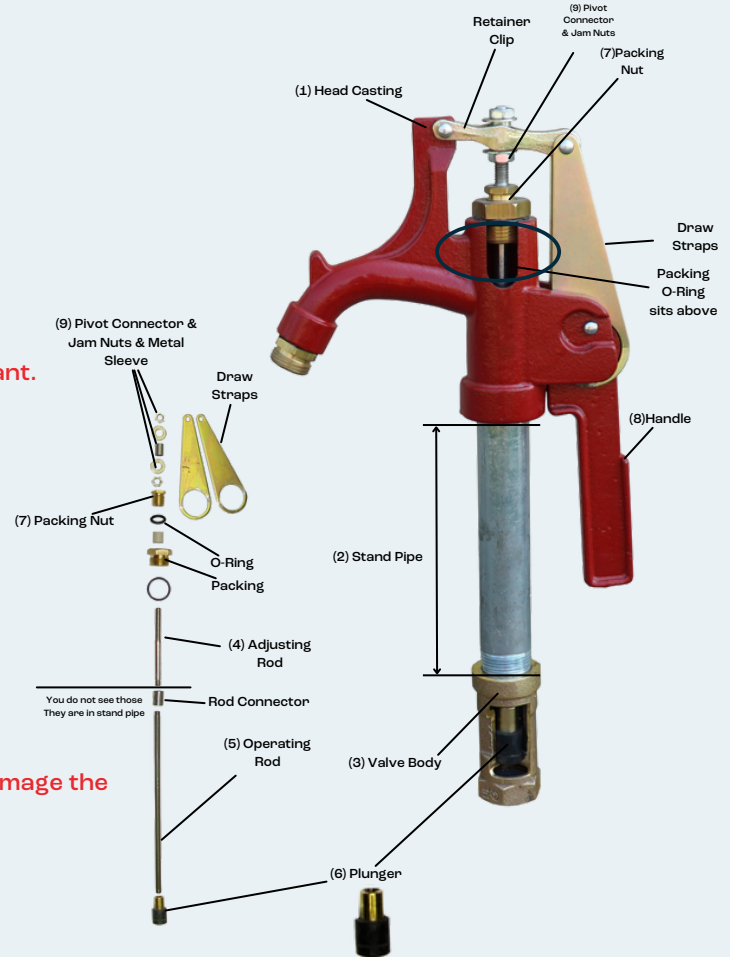

Tools Needed

Wrenches

2x 9/16

1x 3/4"

